


# ACOUSTI-PHONIC (Mono Mode) with Power Off using Stereo Jack

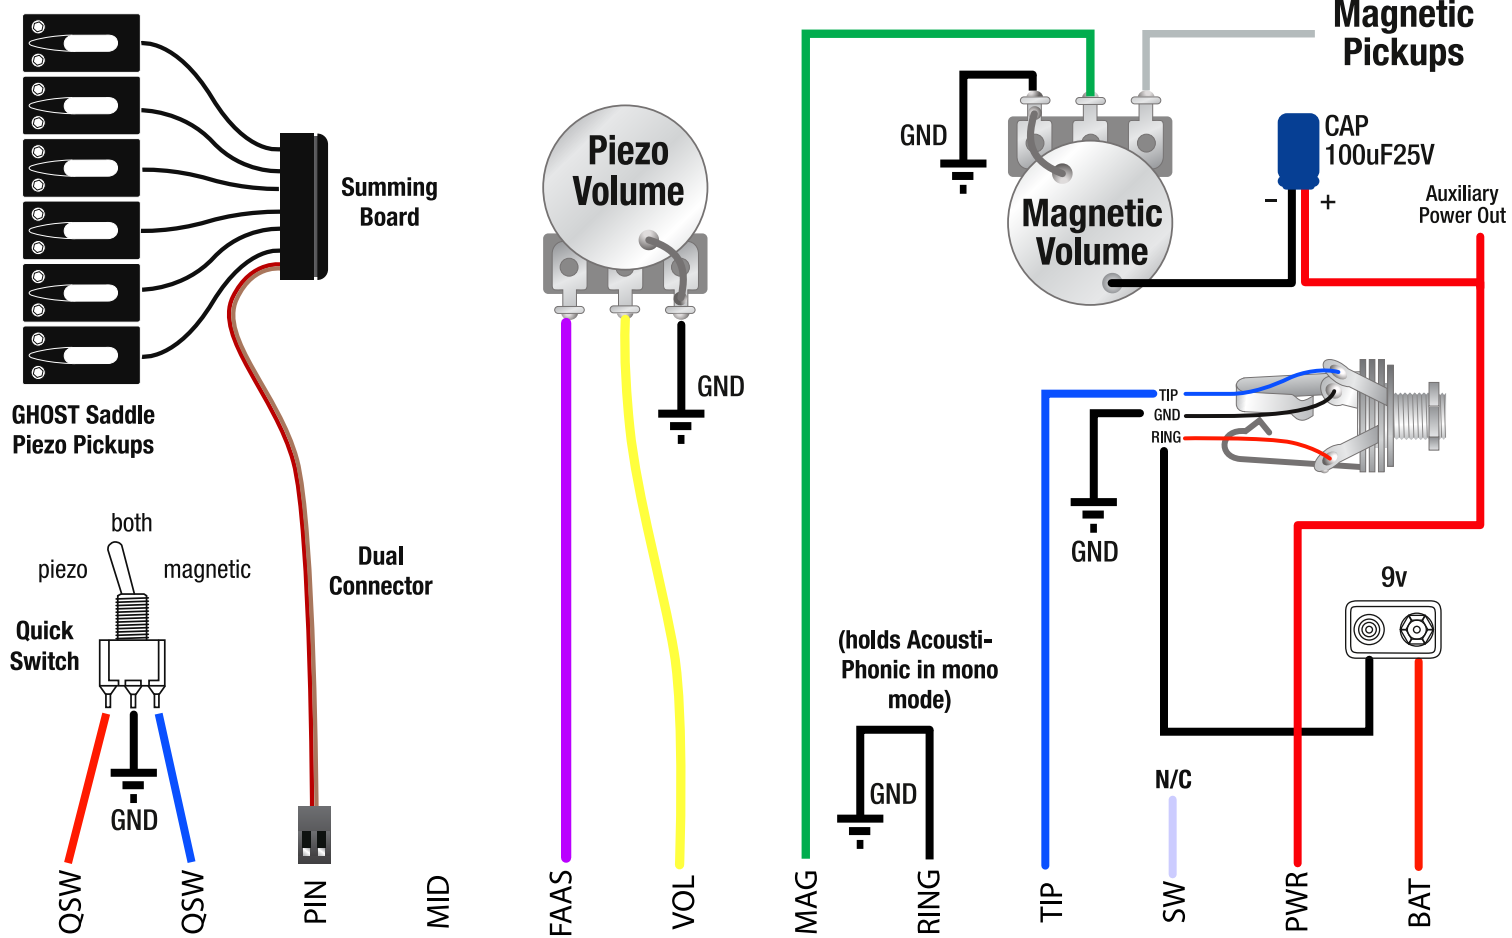

signal through-pins on Acousti-Phonic board (ground pins not shown)

